

Overview: Demonstrates the use of the VISA functions to communicate to a GPIB instrument.

Requirements: NI-488.2 and NI-VISA Drivers

Instructions:

- Ensure the resource specified in the VISA GPIB Resource control is properly configured in NI Measurement & Automation Explorer. (Devices and Interfaces, GPIBO, Properties = Use defaults except for Termination Settings: Send EOI at End of Write, Terminate Read on EOS, EOS Byte = 13, 8-bit EOS compare, Set EOI with EOS on Write)
- 2. 3200 computer I/O GPIB setup: Send EOI = yes, Terminator = CR, Send Ack = yes, Cmd Compat = 3800
- 3. Run the VI.







